


# User manual

## ALFANET 59

### Hygrostat.

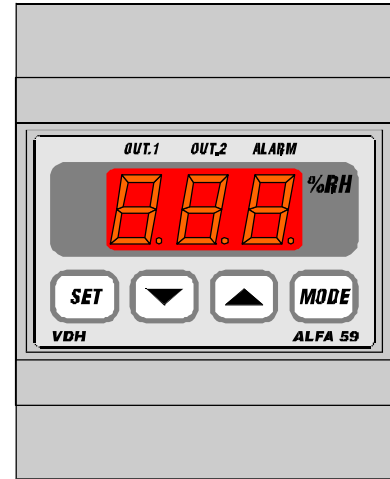

VDH doc: 080339  
Software: ALFA(NET)59

Version: v1.0  
File: Do080339.WPD

Datum:06-03-2008  
Range: 0/+100%RH

#### \* Installation.

On the topside of the **ALFANET 59** is shown how the sensor, power supply and relays has to be connected.

After connecting the **ALFANET 59** to the power supply, a self test function is started. As this test is finished the measured humidity appears in the display.

#### \* Control.

The **ALFANET 59** Hygrostat can be controlled by four push buttons on the front. These keys are:

- SET** - view / change set point and reset alarm.
- UP** - increase value.
- DOWN** - decrease value.
- %RH** - hidden key above **SET** key and behind %RH symbol.

#### \* View set point.

By pushing the **SET** key the set point appears in the display. The decimal point of the last display starts blinking to indicate this. After a few seconds after releasing the **SET** key the set point disappears and the measured temperature is shown again.

#### \* Changing set point.

Push the **SET** key and the set point appears in the display. Release the **SET** key. Now push the **SET** key again together with the **UP** or **DOWN** keys to change the set point. After a few seconds after releasing the **SET** key the set point disappears and the measured temperature is shown again.

#### \* Status of the Relays.

By pushing the hidden **°C** key the display shows the status of the relays. Each display segment shows the status of the relay output, showing 0= off and 1=on. The code 110 means relay 1 and relay 2 are on and relay 3 is off.



\* **Setting internal parameters.**

Next to the adjustment of the set point, some internal settings are possible like differentials, sensor-adjustments, set point-range and function of the hygrostat.

By pushing the **DOWN** key for more than 10 seconds, you enter the 'internal programming menu'. In the left display the upper and the lower segments are blinking. Over the **UP** and **DOWN** keys the required parameter can be selected (see table for the parameters).

If the required parameter is selected, the value can be read-out by pushing the **SET** key. Pushing the **UP** and **DOWN** keys allows you to change the value of this parameter.

If after 20 seconds no key is pushed, the **ALFANET 59** changes to its normal operation mode.

\* **Sensor adjustment.**

The humidity-sensor can be adjusted by using the Offset Humidity sensor (parameter 05).

Indicates the **ALFANET 59** e.g. 2% too much, than the Offset Humidity sensor (parameter 05) has to be decreased with 2%.

\* **Error messages.**

In the display of the **ALFANET 59** the following error messages can appear:

**rLO** - Minimum RH alarm.

Solution E1:

**rHI** - Maximum RH alarm.

- Check if sensor is connected correctly.

**E1** - RH sensor failure.\*

- Check RH-signal. (0/+100%RH=0/+1Vdc)

- Replace sensor.

**EE** - Settings are lost.

Solution EE:

- Reprogram the settings.

\*)

**-L-** - In case of sensor short-circuit the display alternates between error-code **E..** and **-L-**, as indication for a short-circuit sensor.

**-H-** - In case of open-circuit sensor the display alternates between error-code **E..** and **-H-**, as indication for a open circuit sensor.

\* **Reset Alarm.**

When a error-messages appears it can be reset by pushing the **SET** key. The function of this key depends on parameter P37.

\* **Technical details.**

Type : ALFANET 59 Hygrostat.  
Range : 0/+100%RH read-out per 1%RH  
Read out : 3-digit 7-segments display  
Status LEDs : LED 'SET' and LED 'RH'  
Supply : 230 Vac 50/60Hz (-5/+10%).  
Relays : Ry1= SPST(NO) 250V/8A (cos  $\phi$ =1) of 250V/5A (cos  $\phi$ =0.4)  
Ry2= SPST(NO) 250V/8A (cos  $\phi$ =1) of 250V/5A (cos  $\phi$ =0.4)  
Ry3= SPDT(NO/NC) 250V/8A (cos  $\phi$ =1) of 250V/5A (cos  $\phi$ =0.4)  
The three relays have one common (C).  
Control : Thru pushbuttons on front.  
Front : Polycarbonate.  
Sensor : RH 95-2 (+12Vdc; 0/+100%RH = 0/+1Vdc)  
Communication : RS485-Network (2-wire shielded min. 0,75mm<sup>2</sup>; A, B and GND)  
Dimensions : 35 x 77 x 71,5mm (HWD).  
Panel-cutout : 29 x 71mm (HW).  
Accuracy :  $\pm$  0,5% of range.

- Provided with memory protection during power failure.
- Equipped with self-test function and sensor-failure detection.
- Connection with screw-terminals.
- Special version on request available.




\* **Parameters ALFANET 59**

| Parameter | Description Parameter                     | Range                                   | Default Value |
|-----------|---|---|---------------|
| 01        | Function Relays 1                         | 1=Humidify<br>2=Dehumidify<br>3=Alarm   | 1             |
| 02        | Function Relays 2                         | 1=Humidify<br>2=Dehumidify<br>3=Alarm   | 2             |
| 03        | Function Relays 3                         | 1=Humidify<br>2=Dehumidify<br>3=Alarm   | 3             |
| 05        | Offset Humidity sensor                    | -15..+15%RH                             | 0             |
| 10        | Switching differential relay 1            | 1..15%RH                                | 1             |
| 11        | Switching offset relay 1                  | -15..+15%RH                             | 0             |
| 12        | Switching differential relay 2            | 1..15%RH                                | 1             |
| 13        | Switching offset relay 2                  | -15..+15%RH                             | 0             |
| 14        | Switching differential relay 3            | 1..15%RH                                | 1             |
| 15        | Switching offset relay 3                  | -15..+15%RH                             | 0             |
| 20        | Minimum set point                         | 0..100%RH                               | 0             |
| 21        | Maximum set point                         | 0..100%RH                               | 100           |
| 30        | Alarm mode                                | 0= None<br>1= Absolute<br>2= Relative   | 1             |
| 31        | Minimum alarm set point                   | 0..100%RH                               | 0             |
| 32        | Maximum alarm set point                   | 0..100%RH                               | 100           |
| 33        | Time-delay minimum alarm                  | 0..99 min.                              | 0             |
| 34        | Time-delay maximum alarm                  | 0..99 min.                              | 0             |
| 35        | Function alarm relay                      | 0= fail safe al.<br>1= control al.      | 0             |
| 36        | Auto reset alarm after failure recovering | 0= No<br>1= Yes                         | 0             |
| 37        | Manual reset alarm relay with set key     | 0= No<br>1= Yes                         | 0             |
| 40        | Control-delay after power failure         | 0..99 min.                              | 0             |
| 41        | Forced relay function at sensor failure   | 0= None<br>1= Humidify<br>2= Dehumidify | 0             |
| 90        | Network number                            | 1..31                                   | 1             |
| 95        | Software version                          | 0..255                                  | 0             |
| 96        | Production year                           | 00..99                                  | 0             |
| 97        | Production week                           | 1..52                                   | 1             |
| 98        | Serial number (x1000)                     | 0..255                                  | 0             |
| 99        | Serial number (units)                     | 0..999                                  | 0             |


(c) VDH Products BV



\* **Dimensions.**

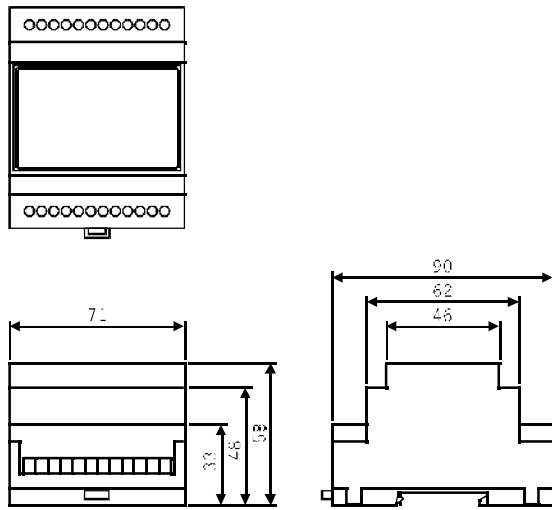

\* **Connections.**

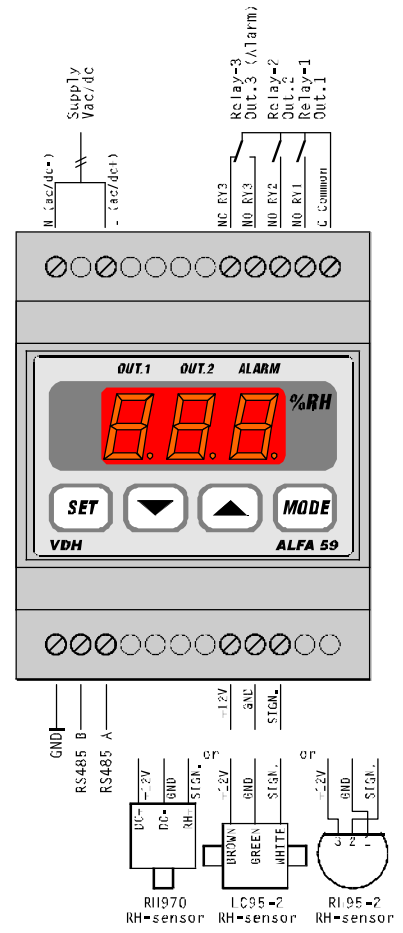

\* **Address.**

VDH Products BV  
 Produktieweg 1  
 9301 ZS Roden  
 The Netherlands

Tel: +31 (0)50 - 30 28 900  
 Fax: +31 (0)50 - 30 28 980  
 Email: info@vdhproducts.nl  
 Internet: www.vdhproducts.nl

